


TiltWatch XTR Mounting Instructions

TiltWatch XTR is a tilt indicator designed to detect unacceptable tilting of goods that must remain upright.

1. Peel the adhesive liner from the back of the TiltWatch® XTR while holding it in an upright position. Once the adhesive liner is removed, the TiltWatch XTR is armed.
2. Place the TiltWatch XTR in an upright position as close as possible to the bottom corner of the container. This placement helps to align the TiltWatch XTR properly and adds rigidity. Apply the TiltWatch XTR to an oil-free surface in an environment above 10°C / 50°F for best results.
3. Press firmly in the center and around the edges of the TiltWatch XTR to ensure strong adhesion to the container to which it is being applied.

Placement

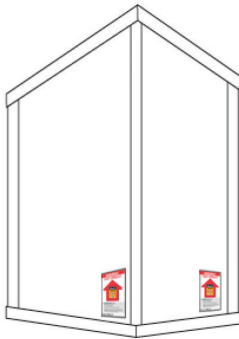

Companion Label



When using a companion label: Remove the TiltWatch XTR companion label from its adhesive liner and carefully place it over the TiltWatch XTR so that it protrudes through the opening.

Tip: Rough wood and heavily waxed wood containers may require special attention. If the wood is extremely rough, SpotSee recommends the use of a spray adhesive to increase bonding strength.

Alert Stickers: Every carton of 100 TiltWatch XTR indicators also contains 100 alert stickers. Place the alert sticker on the packing slip as a reminder to customers to check the TiltWatch XTR immediately upon arrival.



NOTICE

If TILTWATCH is red:

- **ALWAYS** accept shipment.
- Make note on Bill of Lading.
- Inspect for damage immediately.