


# Thermostrip® DS

## Dishwasher Temperature Strips

Thermostrip®DS is a single use irreversible color changing indicator strip that tests the temperature of the water in your dishwasher and is designed to be dated, initialed and affixed to the wash batch record. Slotted strips insure that the indicator is secured on to a utensil or tray, reducing the risk of the strip falling off during a wash cycle yet easily removed and attached to the batch record.

Section 4.7 of the Food Code calls for measuring sanitized food contact surfaces and utensils by an irreversible registering temperature indicator.

### Water Temperature Disinfection Indicator

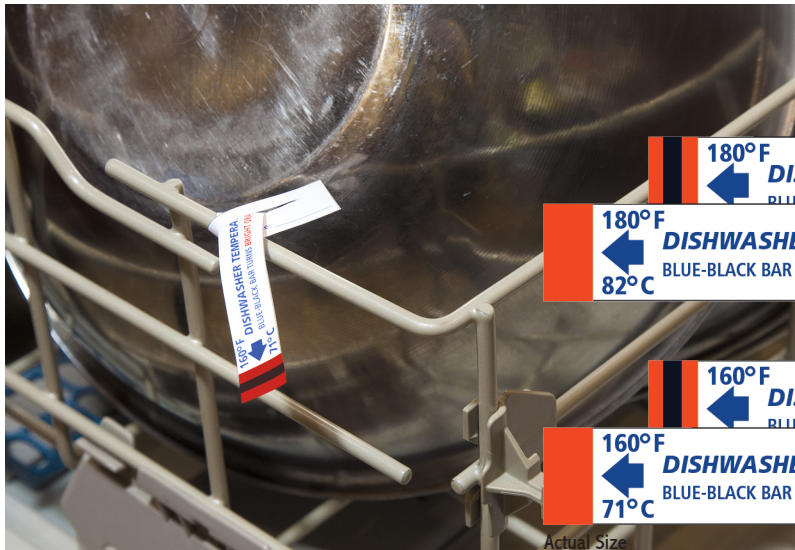

- **Waterproof, irreversible strips provide proof that sanitizing temperature has been reached**
- **Labels change from blue-black to bright orange, permanently, when temperature has been reached**
- **Remove and retain as a permanent record of temperature attained**
- **Proof for HACCP Compliance**
- **Accurate to  $\pm 3^{\circ}\text{F}$  of rated temperature**



### Specifications

Part No.	Description	Temperature	Packaging	Size
P9029 NDP25	Single Temperature Point Strip	160°F/71°C	25 / pack	4" x 0.5"
P9030 NDP25	Single Temperature Point Strip	180°F/82°C	25 / pack	4" x 0.5"

### How to Use

1. Attach Thermostrip DS to a utensil or tray by wrapping around (item or rack grill) and sliding the color bar through the slit in the strip.
2. Place tray/utensil with attached strip in dishwasher and run dishwasher.
3. Read strip – Strip color bar will turn to bright orange when the water temperature reaches rated temperature.
4. Remove strip and attach to dishwasher documentation.