

FreezeSafe descending temperature indicators visually alert users when a temperature breach has occurred so that the appropriate actions can be taken.

Using the FreezeSafe:

1. The FreezeSafe indicator should appear clear prior to use. The FreezeSafe does not require special arming to be ready to use.
2. Remove the FreezeSafe indicator from the roll and adhere the indicator to a clean, dry surface.
 - a. The FreezeSafe should be located as close to the product being monitored as possible and where it will be visible to the receiver of the monitored shipment.
 - b. The FreezeSafe can be adhered directly to the product being monitored or located inside the packaging.

Interpreting the FreezeSafe:


When the FreezeSafe is exposed to temperatures below the stated activation temperature $\pm 1^\circ\text{C}^*$, the indicator will turn from clear to magenta.

The FreezeSafe will respond according to the chart below:


0°C	Within 30 minutes
2°C	Within 90 minutes



Unactivated

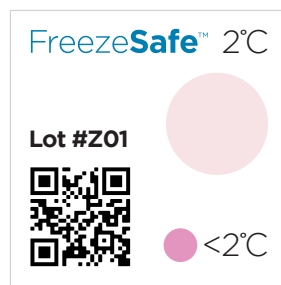

Transition Zone

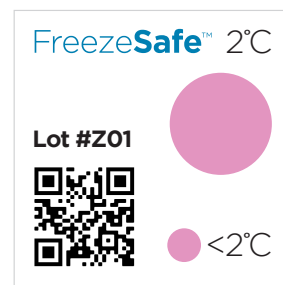

Activated

Storage Recommendations:

FreezeSafe indicators should be stored out of direct light between 15 and 25°C / 59 and 77°F