

Thermostrip® DL - Dishwasher Temperature Labels

Thermostrip® DL is a self-adhering and waterproof color-changing label that measures the surface temperature of dishware in dish washing machines. Using Thermostrip® DL on a dish surface with each wash cycle will provide a record that the proper sanitation temperature has been reached.

Section 4.7 of the Food Code calls for measuring sanitized food contact surfaces and utensils by an irreversible registering temperature indicator.


- Waterproof Irreversible Labels provide proof that sanitizing temperature has been reached
- Labels change from white to black permanently when temperature has been attained
- Adhesive backed
- Remove and retain as a permanent record of temperature attained
- Proof for HACCP Compliance
- Accurate to $\pm 1^{\circ}\text{C}$ of rated temperature

Surface Temperature Disinfection Indicator



How to Use

- Attach to the thickest clean dry dish
- Place labeled dish/utensil in dishwasher and run dishwasher
- Read label – Label will turn from white to black when surface temperature reaches rated temperature
- Remove label and attach to dishwasher documentation

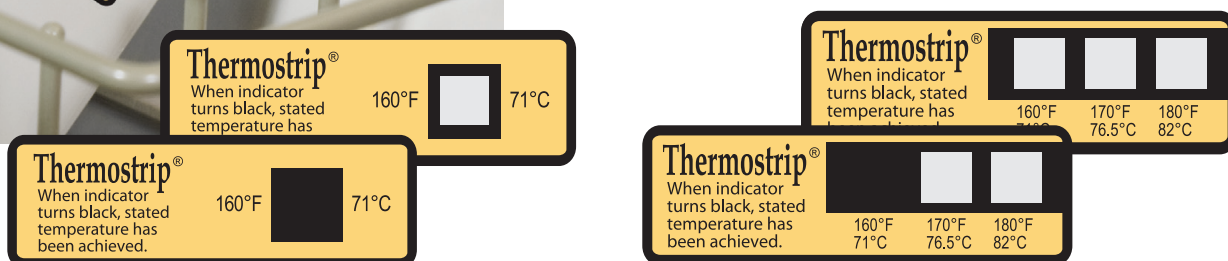

Specifications

P9001-24	Single Temperature Point Label	140°F/60°C	$\frac{1}{2}'' \times 1\frac{3}{4}''$
P9007-24	Single Temperature Point Label	160°F/71°C	$\frac{1}{2}'' \times 1\frac{3}{4}''$
P9009-24	Single Temperature Point Label	180°F/82°C	$\frac{1}{2}'' \times 1\frac{3}{4}''$
P9002-24	Single Temperature Point Write-on Label	170°F/76.5°C	$\frac{1}{2}'' \times 1\frac{3}{4}''$
P9003-16	Three Temperature Point Label	150° 65.5°	160° 71°
		170°F 76.5°C	$\frac{1}{2}'' \times 1\frac{3}{4}''$
P9008-16	Three Temperature Point Label	160° 71°	170° 76.5°
		180°F 82°C	$\frac{1}{2}'' \times 1\frac{3}{4}''$